



14 powder coat colors

ICW mounts are available your choice of 14 durable powder coated finishes to match your facility decor.


White (MW) Matches A-dec	Writable Black (WB)	Putty (P) Matches Pelton & Crane	Tan (T) Matches A-dec	Quartz (QG)
-----------------------------	---------------------	-------------------------------------	--------------------------	-------------

Arctic Silver	Forest Grey	Sage
Bronze	Pearl	Shadow
Charcoal	Pewter	White



Overhead Arm

UL180i-OHAT and UL180i-OHAP

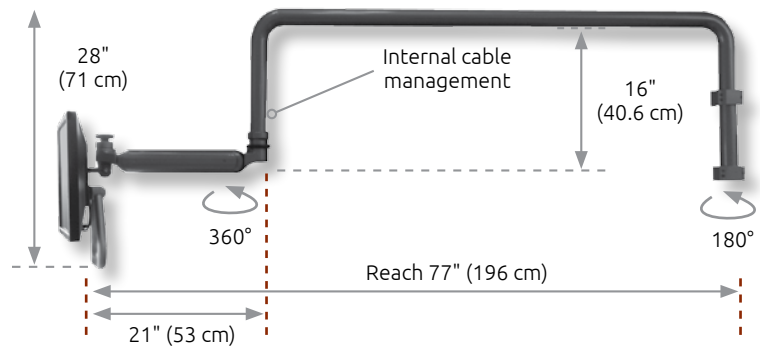

UL182i-OHAP Wall Plate Model



- 26" of Vertical Adjustability
- 360° of Monitor Swivel
- 77" of Horizontal Reach
- 360° of Ultra 182 Arm Pivot

Specifications

Load capacity:	32 lbs (14.5 kg)
Vert. adjust range:	26" (66 cm)
Maximum reach:	77" (196 cm)
Stowed depth:	8" (20 cm)
Arm swivel at mount:	180°
Ultra 182 arm swivel:	360°
Monitor swivel:	360°
Monitor tilt:	90°
VESA interface:	75 mm and 100 mm

Monitor not included.

The **NEW Overhead Arm** attaches to the wall, providing 180° of horizontal rotation for a monitor. The monitor can be pulled down when required, then stowed up and out of the way. The Ultra 182 arm segment provides up to 26" (66 cm) of vertical adjustment with a maximum reach of 77" (196 cm).



Elite Double Arm

ELP5220-WT-KUB

Effortless movement, optimum viewing angles

Specifications

Load capacity: 28 lbs (12.7 kg) LCD only
22 lbs (9.9 kg) LCD and keyboard

Vert. adjustment range: 42" (106.7 cm)

Maximum reach: 56.25" (122.9 cm) LCD only,
64" (162.6 cm) LCD and Keyboard Ultra Slide

Stowed depth: 10.5" (26.7 cm)

Arm swivel at mount: 180°

Screen swivel: 360°

VESA interface: 75 mm and 100 mm

Mounting options: wall, desk, pole, wall track


Monitor, keyboard and mouse not included.



NOW AVAILABLE: NEW ELITE 5216

- 10" shorter than the Elite 5220
- Strong lateral support
- Available with our flip-up keyboard or our new Keyboard Ultra Slide

\$919
as shown

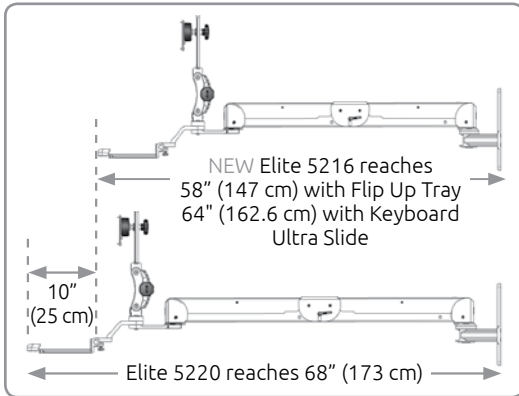

Ultra 180 and Ultra 182

The only arm with smooth, stable 180° vertical and up to 360° horizontal rotation PATENT 9243743

The unique and patent pending Ultra 180 arm offers full articulation of your monitor and keyboard while supporting up to 32 lbs (14.5 kg). Easy to install and cable manage, the arm provides 180° of vertical rotation and up to 360° of horizontal rotation. The Ultra 180 stows close to the wall, making it the perfect choice for tight spaces.

Specifications

Load capacity: 32 lbs (14.5 kg)

Maximum reach UL 180 with Flip Up Keyboard: 42" (106.7 cm)

Maximum reach UL 180 with Keyboard Ultra Slide: 46" (116.8 cm)

Maximum reach UL 182 with Flip Up Keyboard: 46" (116.8 cm)

Maximum reach UL 182 with Keyboard Ultra Slide: 50" (127 cm)

Stowed depth: 10" (25.4 cm)

Vert. adjustment range UL180: 16" (40.6 cm)

Vert. adjustment range UL182: 24" (61 cm)

Vert. arm rotation: 180°



Arm swivel: up to 360°

Monitor, keyboard and mouse not included.

\$656
as shown

UL180EV7-W3-KUB-A1

Ultra 180 provides 16" (40.6 cm) of vertical adjustment

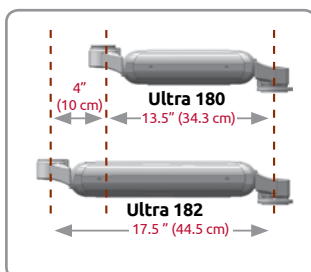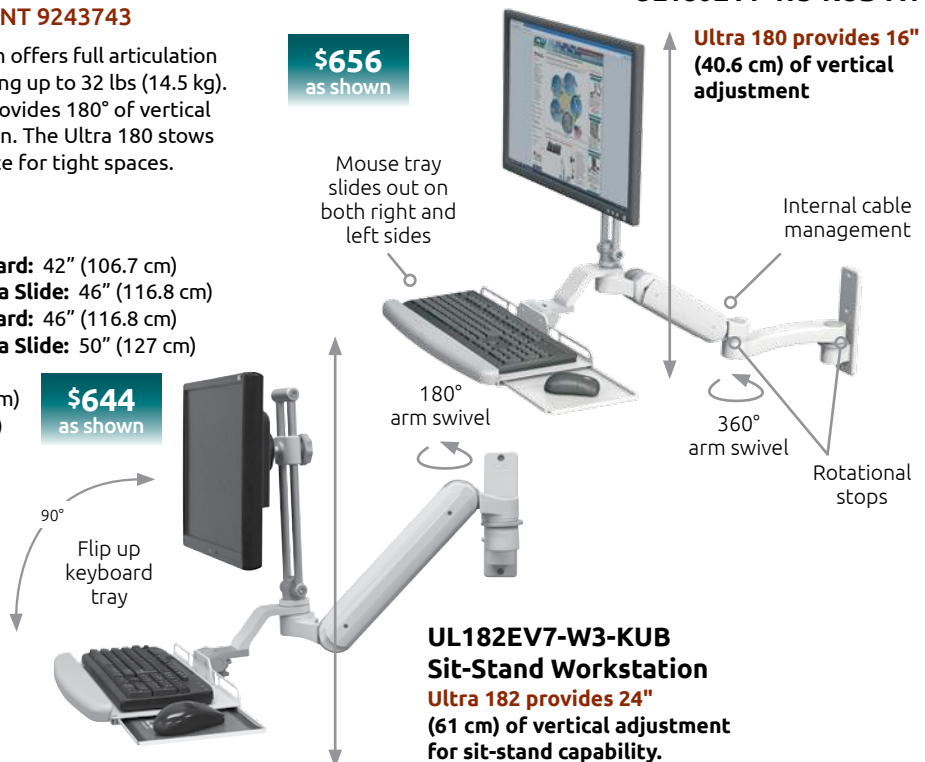

Titan Elite Ceiling

T2EQ-C8X5

**Exceptional range of motion.
Precise positioning.**

Specifications

Load capacity: 28 lbs (12.7 kg)

Lift distance: 21" (53.3 cm)

Maximum reach: 42" (106.7 cm)

Arm swivel at mount: 360°

Screen swivel: 360°

Screen tilt: 50°

Monitor not included.



NOW EASY TO WIRE
Does not require disassembly.
Wires run through the joints.

Brake and adjustable rotation stops

5" extension pipe included.
3 other length options available.

360° arm swivel

360° arm swivel


Counter balanced arm with adjustable tension

Internal cable management protects wires and simplifies cleaning

50° screen tilt at ball joint

6-way tilt and rotate

HORIZONTAL EXTENSION

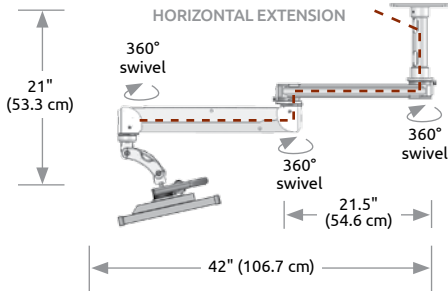

\$757
as shown

NEW Under-monitor handle is included.
Handlebar available on request.



VT21 Low Profile Sit-Stand Workstations

Starting at
\$799



Locking lift assist easily raises and lowers unit

Flip up keyboard tray

90°

Built-in poly wrist rest

21" (53.3 cm) vertical movement



VTLP Low Profile

Vert. adjustment range: 21" (53.3 cm)

Extended depth with keyboard tray: 17"

Stowed depth: 4" (10 cm)

Mounts flat against the wall

Monitor does not rotate or tilt

VT21

Vert. adjustment range: 21" (53.3 cm)

Extended depth with keyboard tray: 17"

Stowed depth: 5.5" (14 cm)

Mounts flat against the wall

Monitor rotates, swivels and tilts

VTTM Dual Arm

Vert. adjustment range: 21" (53.3 cm)

Extended depth with keyboard tray: 28"

Stowed depth: 7" (17.8 cm)


Horizontal swivel of arms at mount: 180°

Monitor rotates, swivels and tilts

Tablet Mount - Professional

TABSDM: Tamper Resistant Desk Mount

TABCC: Clamp mount **\$259**

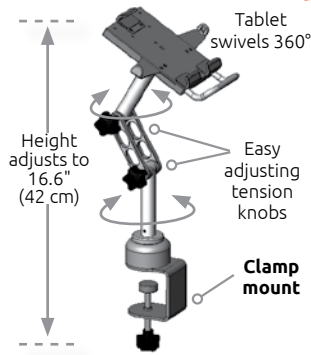

Specifications


Maximum height: 16.6" (42 cm)

Stowed height: 26" (66 cm)

Minimum tablet size: 6.5"x9.5" (16.5x24 cm)

Maximum tablet size: 8"x11.5" (20.3x29 cm)

Tablet not included.

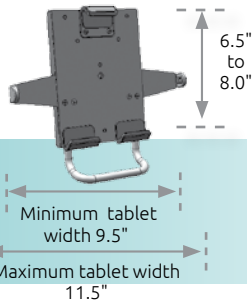

Also available as tablet mounting plate only, no stand. Theft resistant fastener is included.

TABV \$139

Ultra Undercabinet Monitor Mount

UL180i-BV-TS28-D1

Starting at **\$594** as shown

Specifications

Load capacity:

32 lbs (14.5 kg)

Ultra 180 arm reach:

16" (40.6 cm)

Horizontal glide: 28" (71 cm)

Stowed depth: 10" (25.4 cm)


Arm swivel at mount: up to 360°

Screen rotation: 360°

Screen tilt: 50°

Mounting options:

Under cabinet or shelf

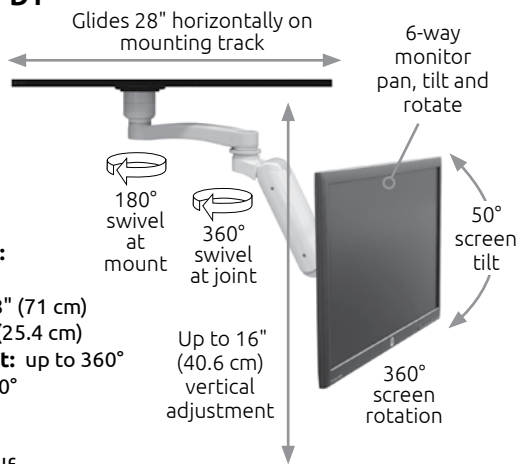

Accessories



GX Series Compact monitor mounts starting at **\$83**



CPU mounts starting at **\$90**



Adjustable Mini-PC and Scanner mounts starting at **\$54**

Elite Single Arm

ELQ5120-C8X12



Specifications

Load capacity: 28 lbs (12.7 kg)

Lift distance: 21" (53.3 cm)

Maximum reach: 27" (68.6 cm)

Arm swivel at mount: 360°

Screen swivel: 360°

Screen tilt: 50°

VESA interface: 75 mm and 100 mm

Monitor not included.

Also available as a wall mount **ELP5120-WT-KUB**

Ultra 500i Workstation

UL500i-T36D-KPB-A3

Specifications

Load capacity: 18 lbs (8.2 kg) LCD only, 28 lbs (12.7 kg) LCD and keyboard

Maximum reach: 42" (106.7 cm)

Stowed depth: 5.5" (14 cm)

Arm swivel: 360°

Screen tilt: 180°

VESA interface: 75 mm and 100 mm

Starting at **\$693** as shown

